



Factory Reset to Default Settings

ADC-V523/523X

grandalarms.com
416-657-2100

Factory Reset to Default Settings

ADC-V523/523X



Resetting a video device to its factory defaults removes all programming and memory from the device.

Important: Wait at least 2 minutes for the video device to power on fully before performing the following procedure. The factory reset might fail if the device is still powering on.

Reset Procedure	Reset button location	Reset button Image
1. Press and hold the  reset button until the LED is flashing green and red (about 15 seconds), then release the button. 2. The camera will reboot with factory default settings.	The reset/WPS button  is on the underside of the camera	

Important: Once a video device has been reset, it is normal for the LED to turn off momentarily. It is best to leave the video device plugged into power and undisturbed for two minutes after performing the factory reset.