



4MP Outdoor Floodlight Camera

Factory Reset to it's Default Settings

grandalarms.com
416-657-2100

4MP Outdoor Floodlight Camera

Factory Reset to it's Default Settings



Resetting a video device to its factory defaults removes all programming from the device.

Important: Wait at least two minutes for the video device to power on fully before performing the following procedure. The factory reset might fail if the device is still powering on.

Reset procedure	Reset button location	Reset button image
1 Press and hold the reset/WPS button for at least 15 seconds until the LED starts blinking red and green. 2 Wait for the device to reboot.	The reset/WPS button is located on the back of the camera.	

Grand Alarms