



Quick Installation Guide

IQWV908 Water Shut-Off Valve

grandalarms.com
416-657-2100

Quick Installation Guide

IQWV908 Water Shut-Off Valve





FEATURES & OVERVIEW

The Water Shut-Off Valve is a retro fit servo that can operate 1/4 turn ball valves with pipes from 1/2" to 1 1/4" and installs easily without the need for a plumber. It uses powerful Z-Wave 700 for maximum range and reliability to the IQ Panel.

Features

- Easy to install, no plumber needed
- Retrofit existing ball valves
- Works with IQ Panel
- Peace of mind from water leak damage
- Indoor/Outdoor (avoid direct sunlight)
- Z-Wave Plus 700 series communication
- Adaptive torque output max 8n.m

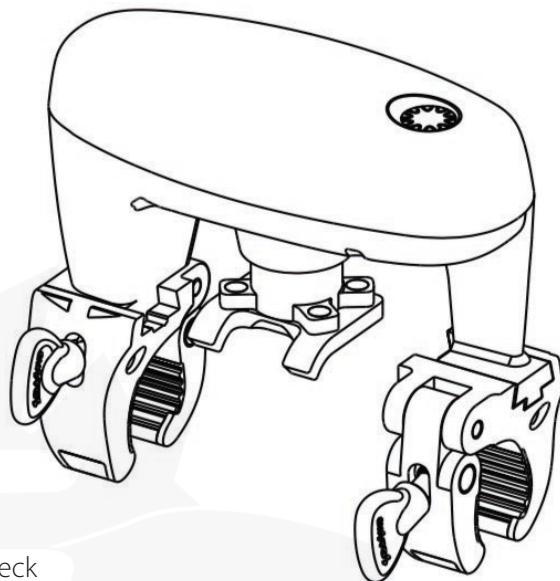

*Does not work on Gate valves. Be sure to check the valve type of your water main prior to install

Specifications

SKU: QZ2160-840 (US) / QZ2160-724 (EU)

Dimensions: 14.8 x 9.6 x 13.3mm

Weight: 603g

Waterproof & Dustproof: IP66

Usage: For Indoor & Outdoor Water Valve On/Off

Operating Temperature: 14 ~ 122°F (-10 ~ +50°C)

Relative Humidity: 8% ~ 80%

Operating Distance: Up to 130ft (indoors) and 450ft (outdoors)

Frequency Type: Z-Wave Plus 700 series

908.4 MHz (US)

868.42 MHz (EU)

Motor Torque: Adaptive output max 8n.m

Touch Sense Button: x1

LED Indicator: 3 color LED (Green, Yellow & Red)

Sound Indicator: Buzzer (Max 85dB)


Power Supply AC-DC: AC (110V 60Hz / 220V 50Hz) DC (12V/1A)

Quick Installation Guide

IQWV908 Water Shut-Off Valve




STEP 1 TURN MAIN WATER VALVE TO THE OFF POSITION

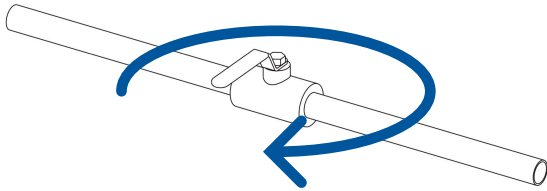

STEP 2 POSITION THE WATER SHUT-OFF VALVE OVER THE TOP OF THE HANDLE


Make sure the thumb screws are facing the same side as the water valve handle

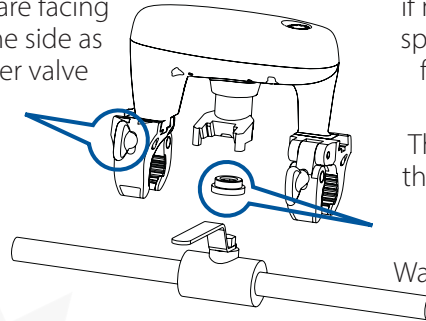

On lower profile valves, if needed, insert the spacer between the fork and the water valve handle.

This spacer ensures the fork will engage the spring loaded gear inside the Water Shut-Off Valve


STEP 3 PRESS DOWN FIRMLY & TIGHTEN THUMB SCREWS

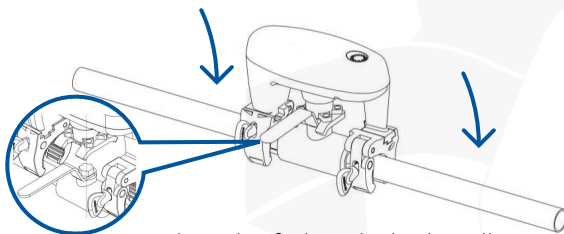

Align the fork with the handle and press down firmly to engage spring loaded gear. Then tighten thumb screws

STEP 4 PLUG-IN TO AN OUTLET


Connect the 5.5mm circular power jack from the DC adapter, turn clockwise to secure water seal cover. Then plug-in to an outlet

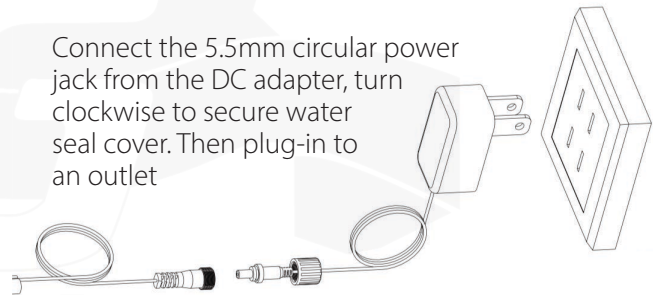


STEP 5 PAIRING WITH THE IQ PANEL




Place panel in "Include" mode

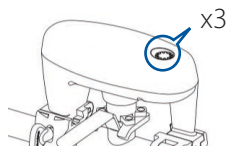

Press the touch sense button 3 times quickly

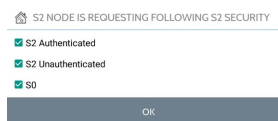

Select desired encryption type

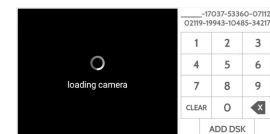

If using S2 Authenticated, enter the first 5 digits of the DSK or scan the QR Code from the box

8

Water Valve

Water Valve

ADD

Customize name and touch Add to complete the pairing process

Installation Guide


Wireless Flood Detector PG9985




STEP
6

TEST OPERATION

Press the touch sense button 1 time quickly to open the valve
The Water Shut-Off Valve will auto calibrate based on the amount of force needed to open/close the ball valve
Touch it again 1 time to close the valve

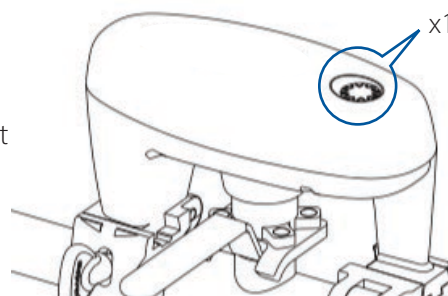


Open & close the valve from the Panel (Settings/Other Z-Wave Devices) to ensure proper communication, range and function

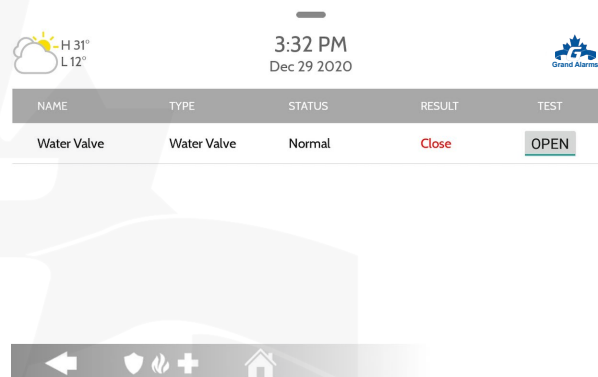

OUTDOOR INSTALLS

If you are installing the Water Shut-Off Valve outdoors, the touch sense button should be disabled to prevent rain drops from activating it.

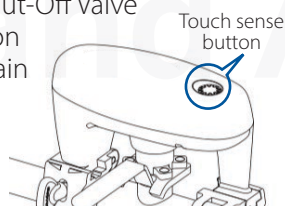

To Disable the Button:

- Press and hold the touch sense button for 3 beeps, then quickly press 3 times in a row.
- If successful, the Yellow LED will flash once, then the Red LED with 1 beep. The LED will then slowly flash Yellow indicating the touch sense button has been locked.

To Re-Enable the Button:

- Press and hold the touch sense button for 3 beeps, then quickly press 3 times in a row.
- If successful, the Yellow LED will flash once, then the Red LED with 3 beeps. The LED will then slowly flash Green (if enrolled) indicating the touch sense button has been unlocked.

TROUBLESHOOTING

LED Status:

- Flashing Yellow: Not yet included into the Z-Wave network or the touch sense button has been disabled.
- Flashing Green: Included into the Z-Wave network.

Factory Default:

- Option 1: Use the IQ Panel to "Clear" the Water Shut-Off Valve. This will remove it from the Z-Wave network and restore factory defaults.
- Option 2: Press and hold the touch sense button for 10 beeps, then quickly press it 5 times in a row. If successful the Yellow LED will flash once, followed by the Green LED and a long beep.

Force Calibration:

- Force calibration is set automatically when first actuated.
- To manually re-calibrate, press and hold the touch sense button for 5 beeps, then quickly press it 5 times in a row. The water valve will open/close 1 to 2 cycles, followed by 2 beeps.